 
 


A

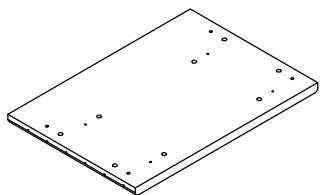

 
面板

B

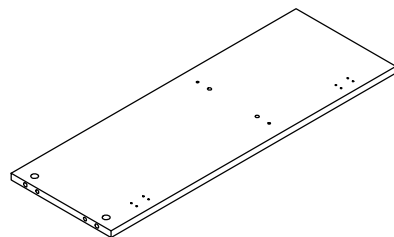


左侧板

C

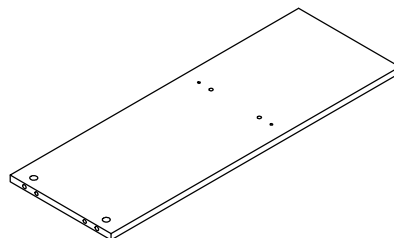


右侧板

 D

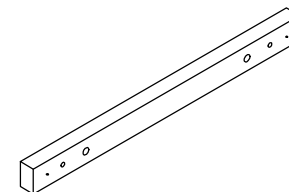


前拉条

 E

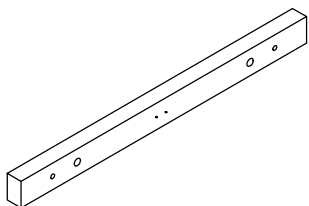


后拉条

 F

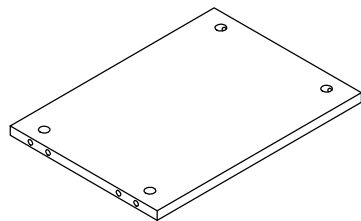


层板

 G

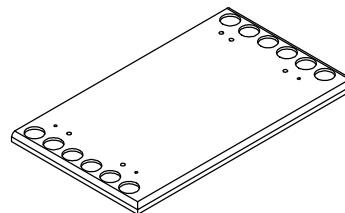

底板

 
H

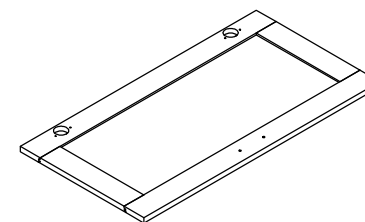

门板


PARTS -PIECES

 I

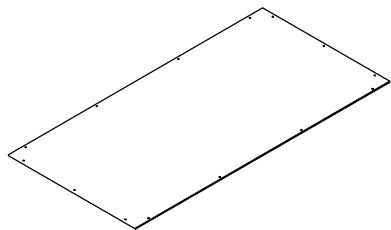


背板

 J

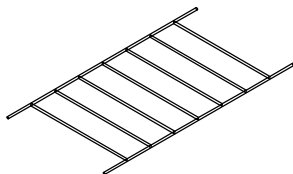


铁件\*2

 
K

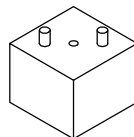


脚\*4

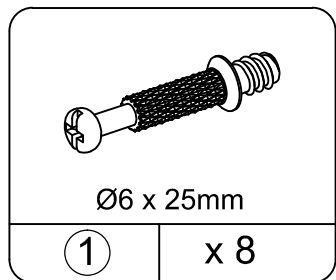 


CAM BOLT

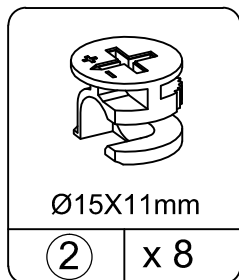 


CAM LOCK

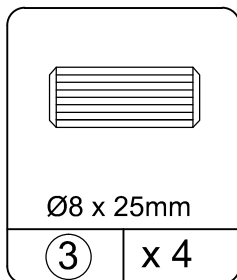 

WOOD DOWEL

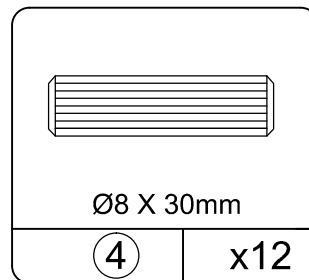 


WOOD DOWEL

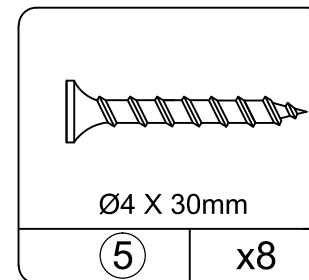 


SCREW

 
PARTS -PIECES

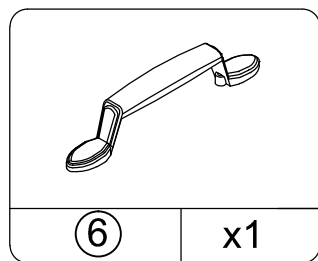


HANDLE

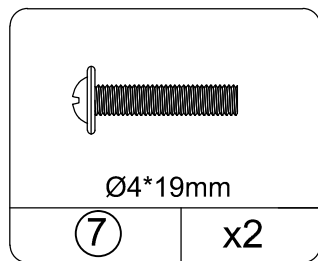 


BOLT

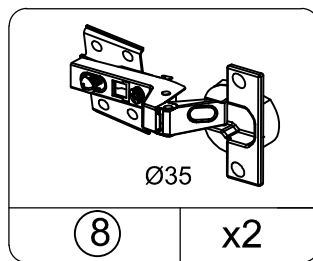 


EURO HINGE

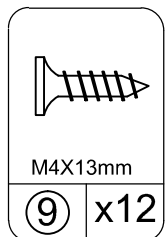 


SCREW

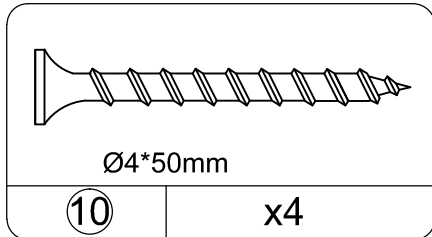 


SCREW

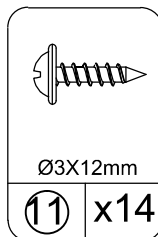 


SCREW

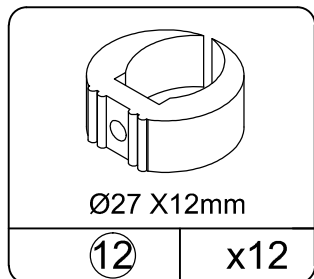 

BUCKLE

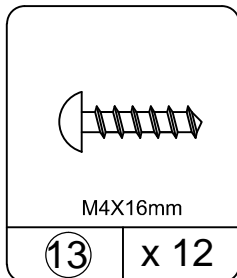 


SCREW

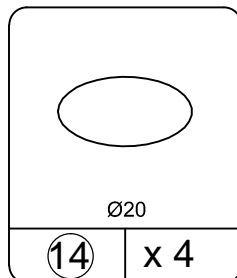 

CAM COVER

This illustration shows how the CAM fastening system works.




 
Esta ilustración muestra como funciona el sistema de fijación de leva.

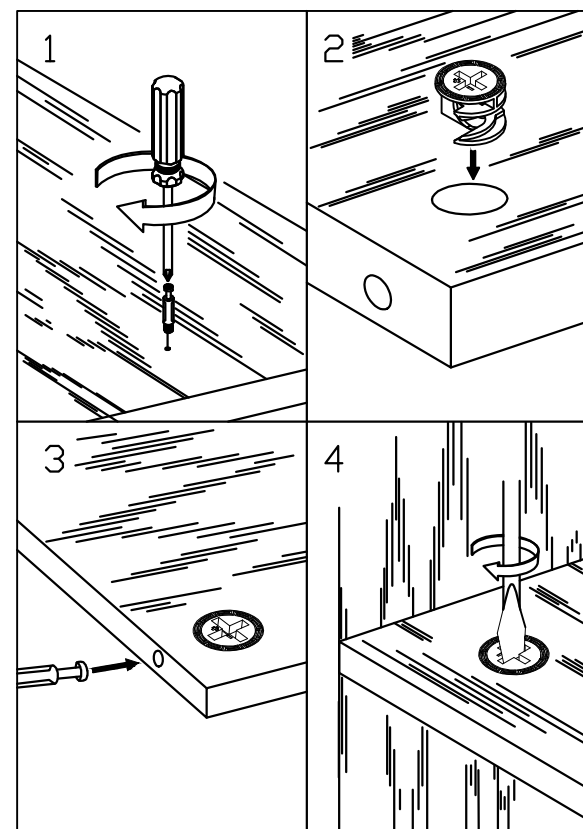







To view a video on how the CAM fastening system works, download a free QR-reader on your smartphone, then scan the code.

Para ver un video de como funciona el sistema de sujeción CAM, descargue una aplicación gratis que podrá ver en su teléfono móvil, entonces escanee el código.

# 1


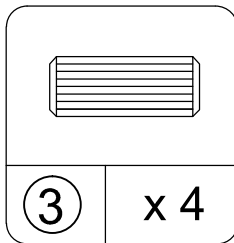 
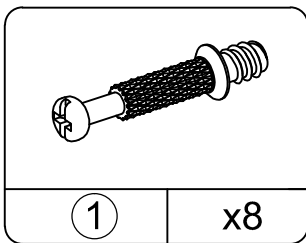 
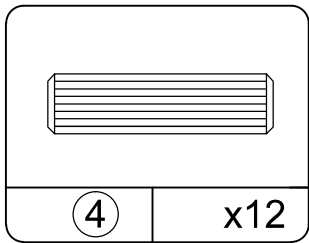 
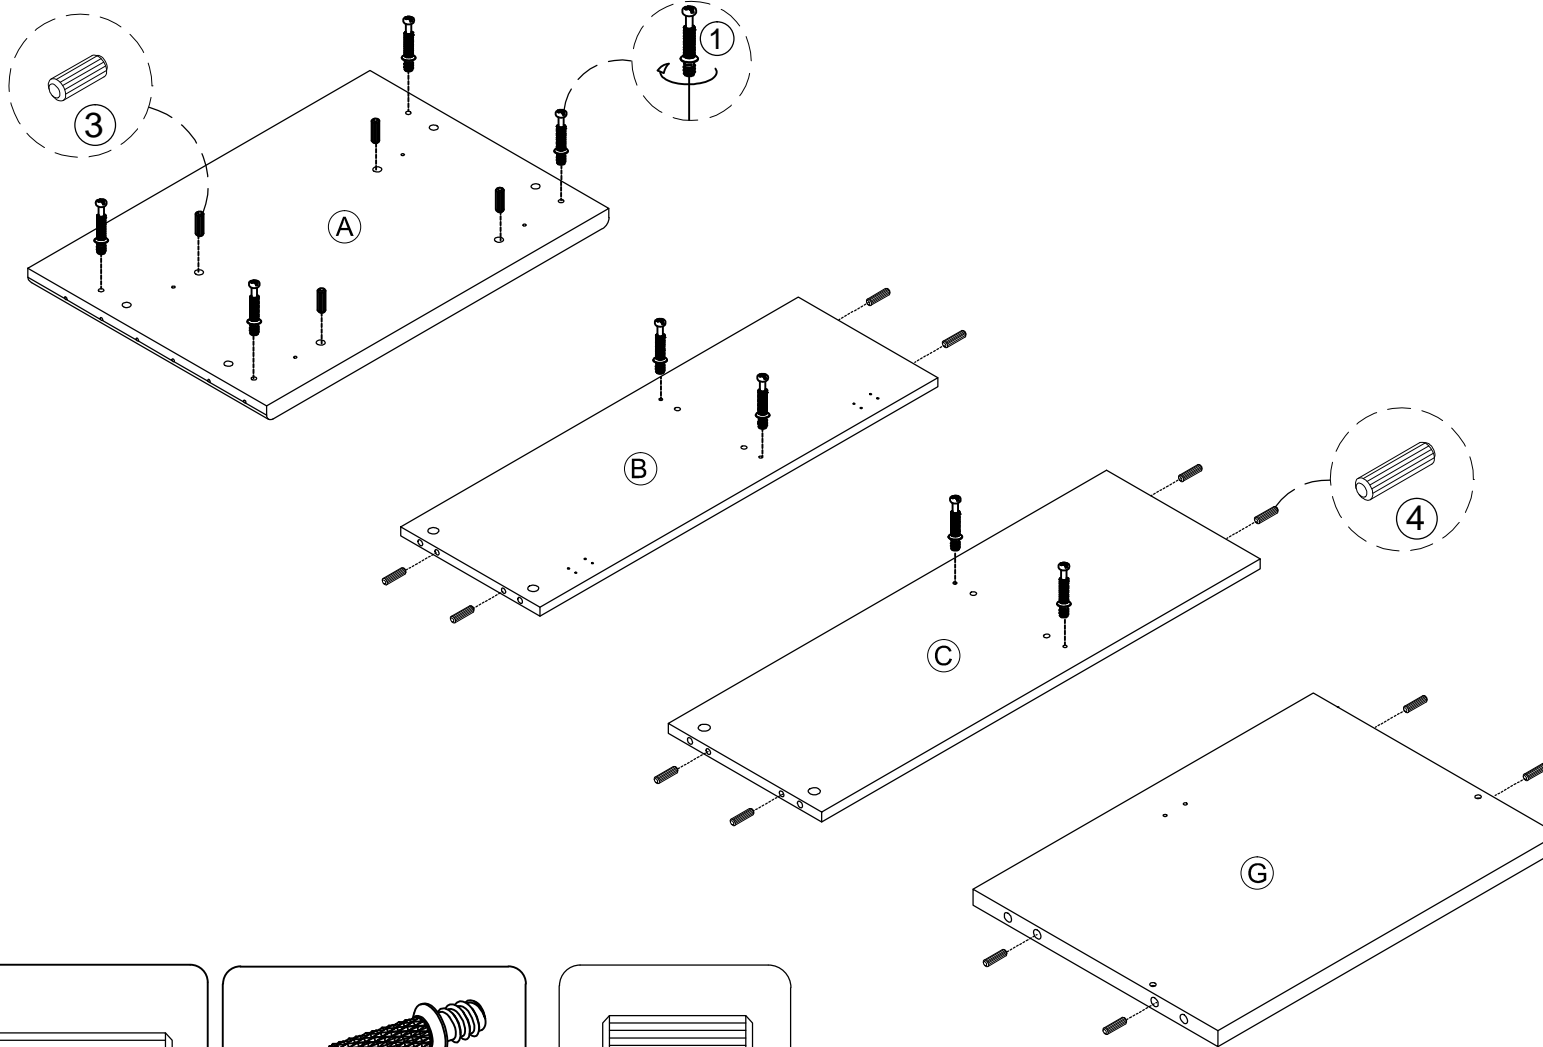 


# 2

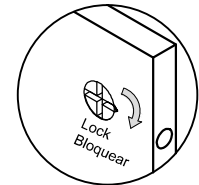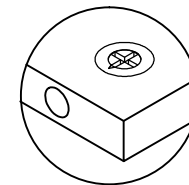  
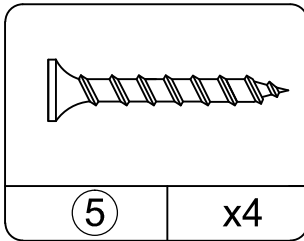 
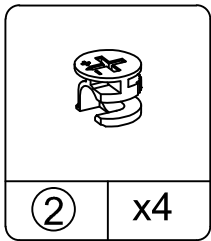 
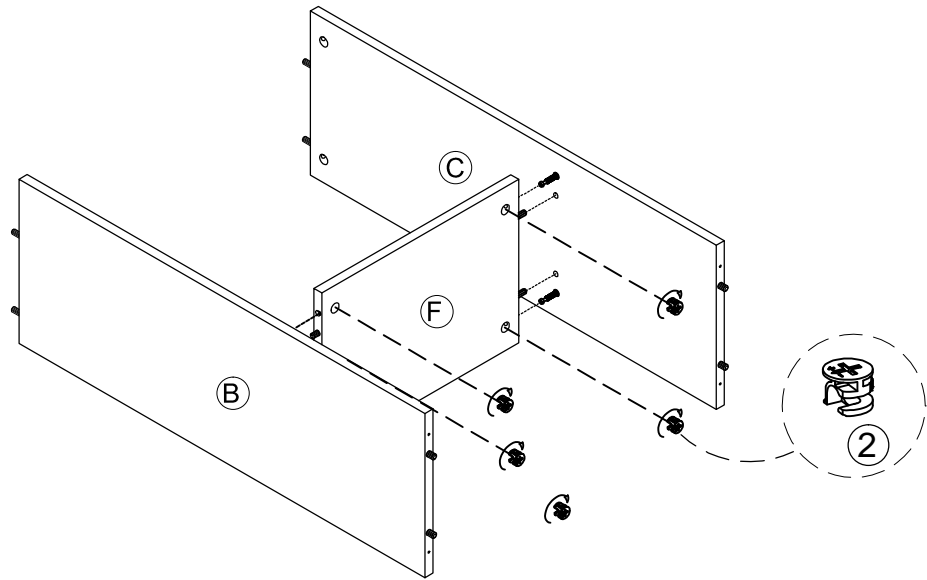 
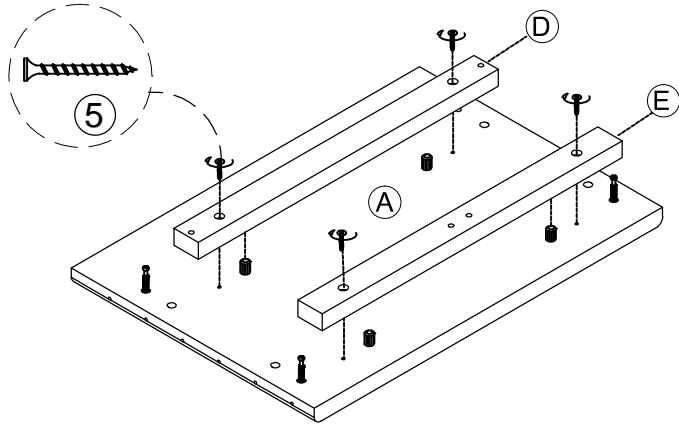 


Proper orientation of cam lock  
La orientación apropiada para el seguro de bloqueo

# 3

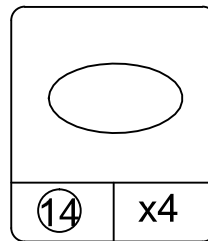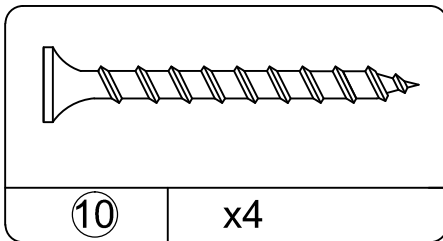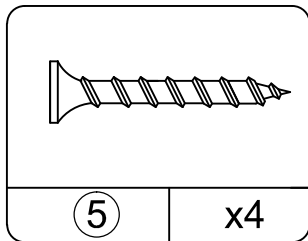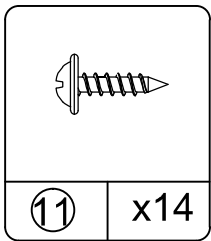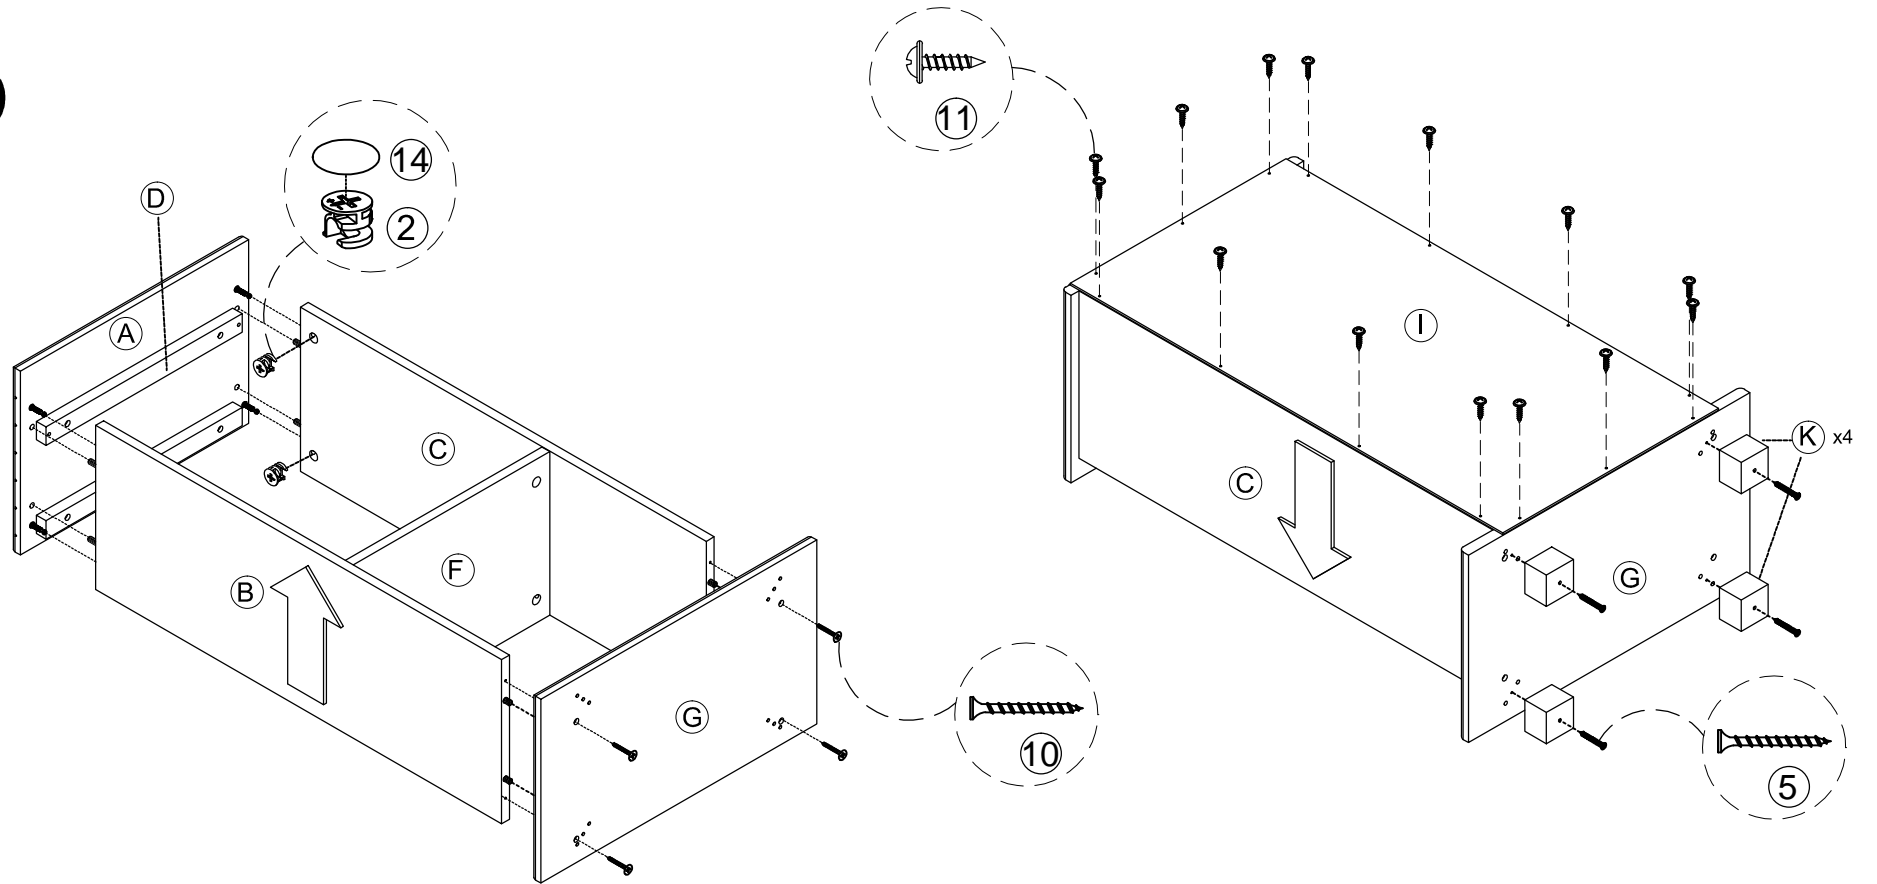     






# 4

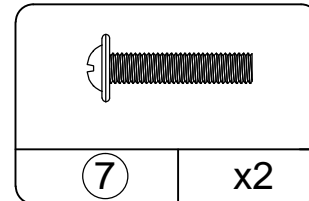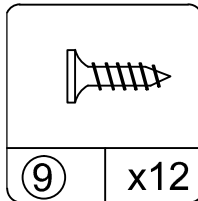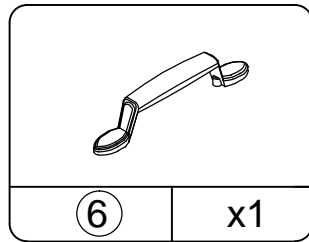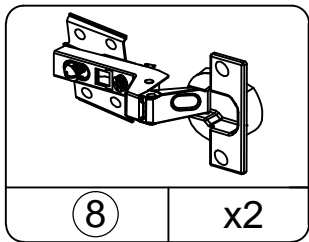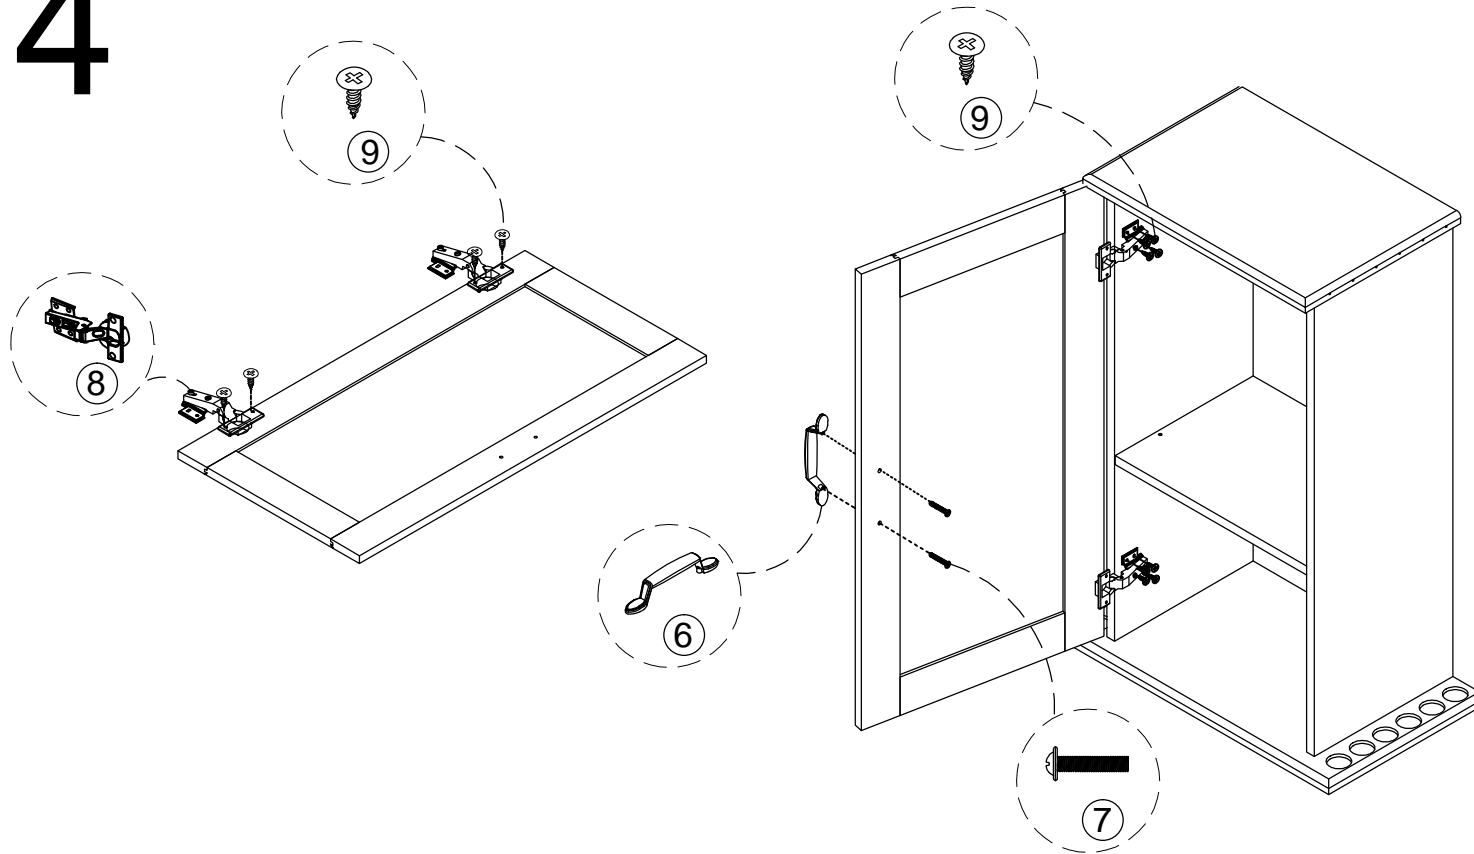     




# 5

   
 
 
铁件先装上面，再装下面

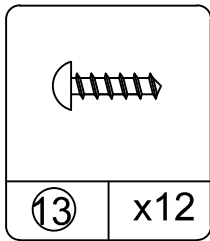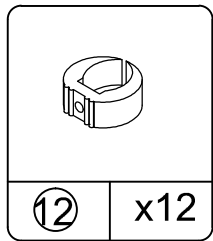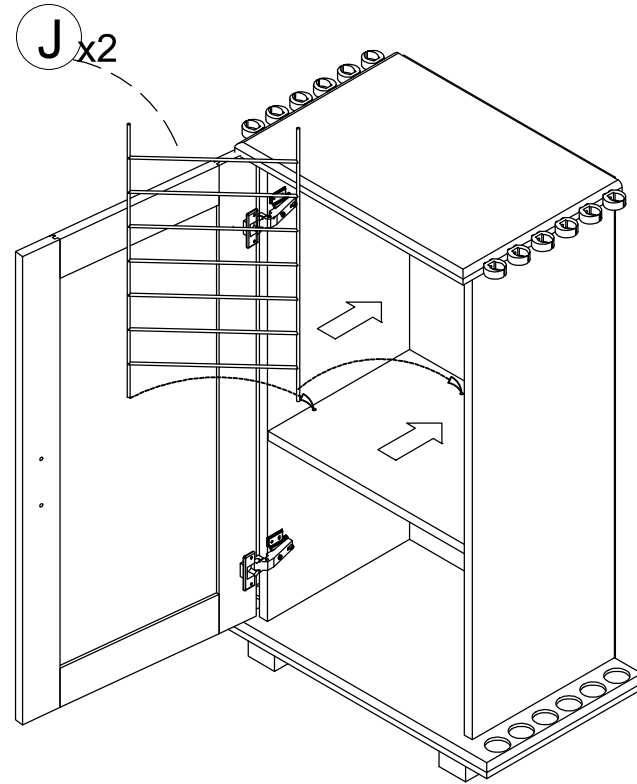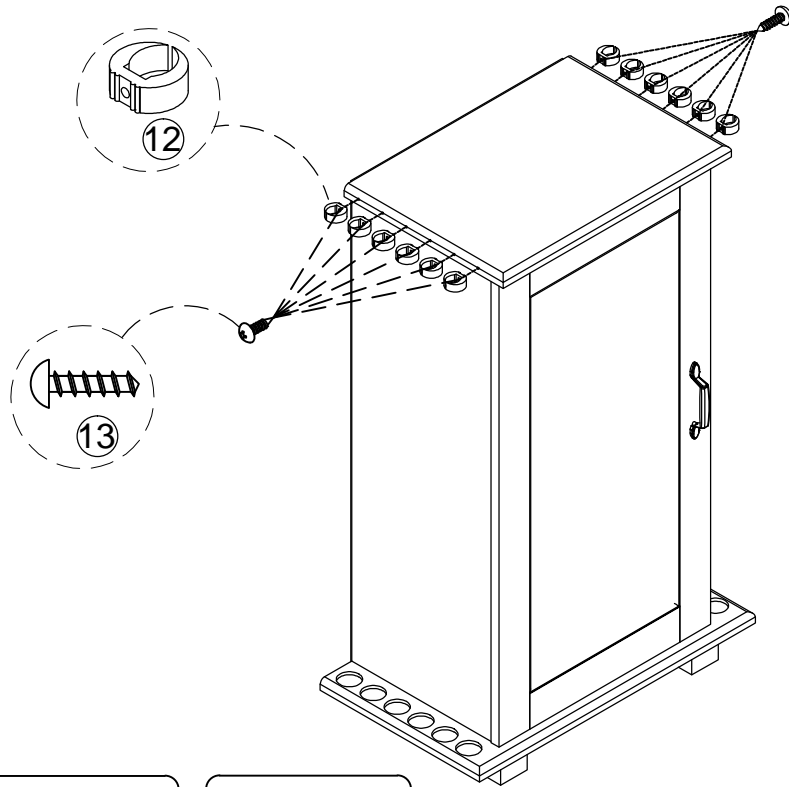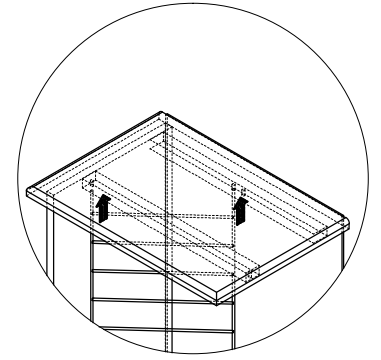

---

   
 
6

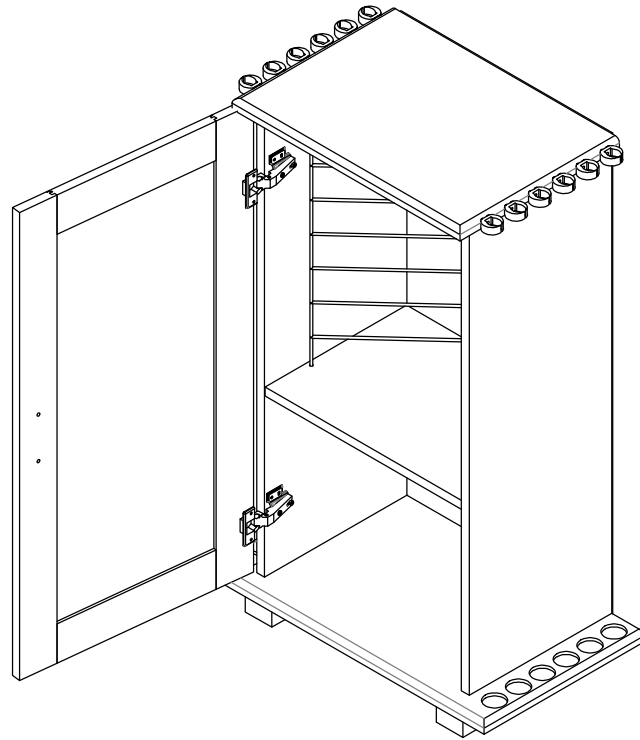

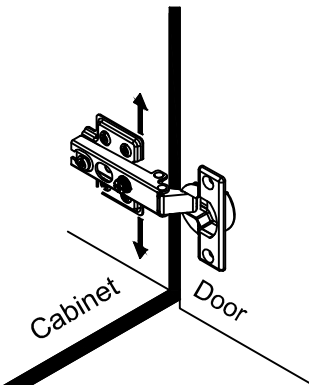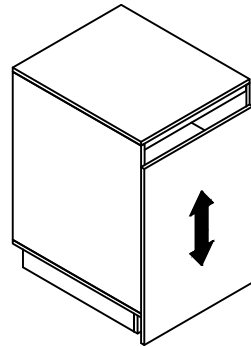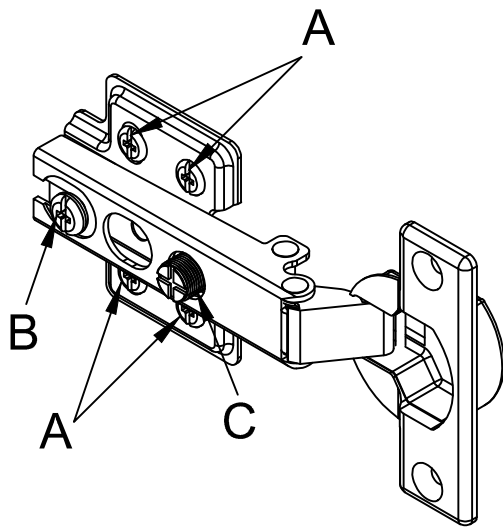



### To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

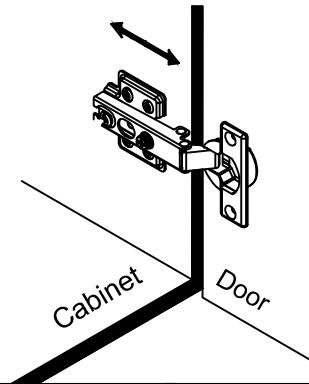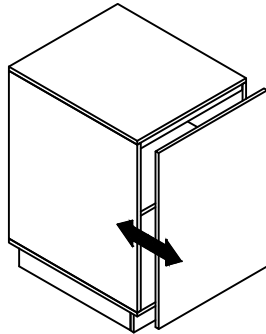

### To adjust depth.

  Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

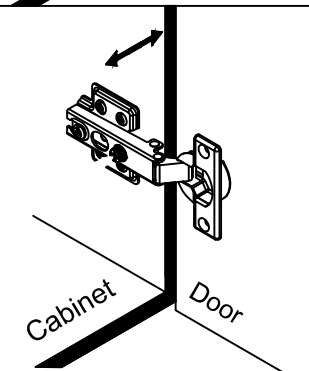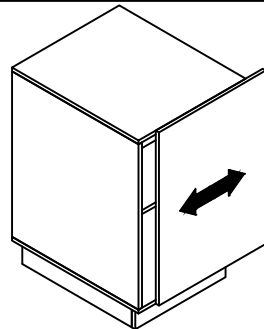

### To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.